



POST-SEASON MAINTENANCE TASKS

performed to ensure proper equipment condition.



WWW.FOODBIKE.PL

What actions should be taken after the season ends?


- ① **Charge the batteries**
Remember to perform at least one full discharge and recharge cycle every 4–6 weeks.



4-6 weeks

- ② **Drain the sanitary system of water**
This prevents damage to components in low temperatures. Remove water from the tanks by unscrewing the hoses/plugs at the bottom. Release any remaining water through the tap.

- ③ **Remove the fuses**
Take the fuses out of the fuse holder located to the left of the voltage inverter.

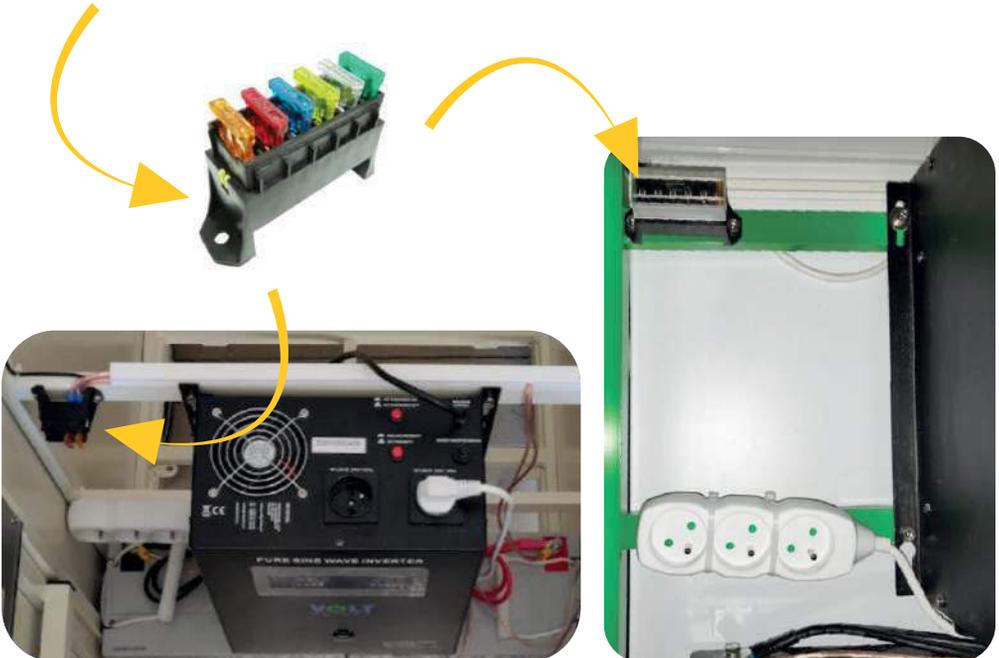

- 4 Thoroughly clean the food warmer
Remove any remaining product residue and water.
- 5 Remove the canopy fabric
Clean it using products intended for waterproof fabrics/awnings to extend its lifespan.
- 6 Clean the vehicle thoroughly and tighten any loose bolts
The winter period is also a good time for servicing and checking the wheels.
- 7 Read the current manual
Available at:
<https://www.foodbike.pl/download/?lang=en>



NOTICE

Before the season starts turn on the food warmer and set it to the lowest possible temperature. This will allow you to check whether the device operates correctly and whether there is any loss of refrigerant.

If you have any questions, we are here to help.

@ serwis@foodbike.pl

+48 517 27 44 27

Service hours: Monday to Friday, 8:00–16:00.

WWW.FOODBIKE.PL